



NOTE : PILE CAP

SETTLEMENT PINS SHALL BE INSTALLED ON EACH CORNER OF THE PILE FOR PIERS H13, H14, H15, HE13, HE14, A18, A19, G2, G3, G4, AND G5

PILE CAP SETTLEMENT PIN DETAIL

SCALE : 1" = 1'-0"