

	FIRE ALARM SYSTEM S		UE	INC					
			SYSTEM OUTPUT						
			MCIP	TE ALAR	N 20NE N 20NE SUPE NUNCA	AT FACE	20ME P 20ME P 20	. / .ċ	
SYSTEM INPUT		р ⁵ 1	11 ¹¹ A ¹	MUT AT	ANDI AC	5	AN ³ SH	UT DO	
A	MANUAL FIRE ALARM PULL STATION ACTIVATES INTO ALARM	x			x	x		A	
В	ACTIVATION OF SPRINKLER RISER WATERFLOW SWITCH	x			x	x		В	
С	ACTIVATION OF SMOKE DETECTOR	x			x	x		С	
D	TAMPER SWITCH ACTIVATION		x			x		D	
E	ACTIVATION OF A DUCT SMOKE DETECTOR		x			x	х	E	
F	SYSTEM TROUBLE			x				F	
G	FIRE SUPPRESSION CONTROL PANEL ACTIVATES INTO ALARM	x						G	
Н	FIRE SUPPRESSION CONTROL PANEL ACTIVATES INTO SUPERVISORY		x					Н	
	FIRE SUPPRESSION CONTROL PANEL ACTIVATES INTO TROUBLE			x				I	
		1	2	3	4	5	6		

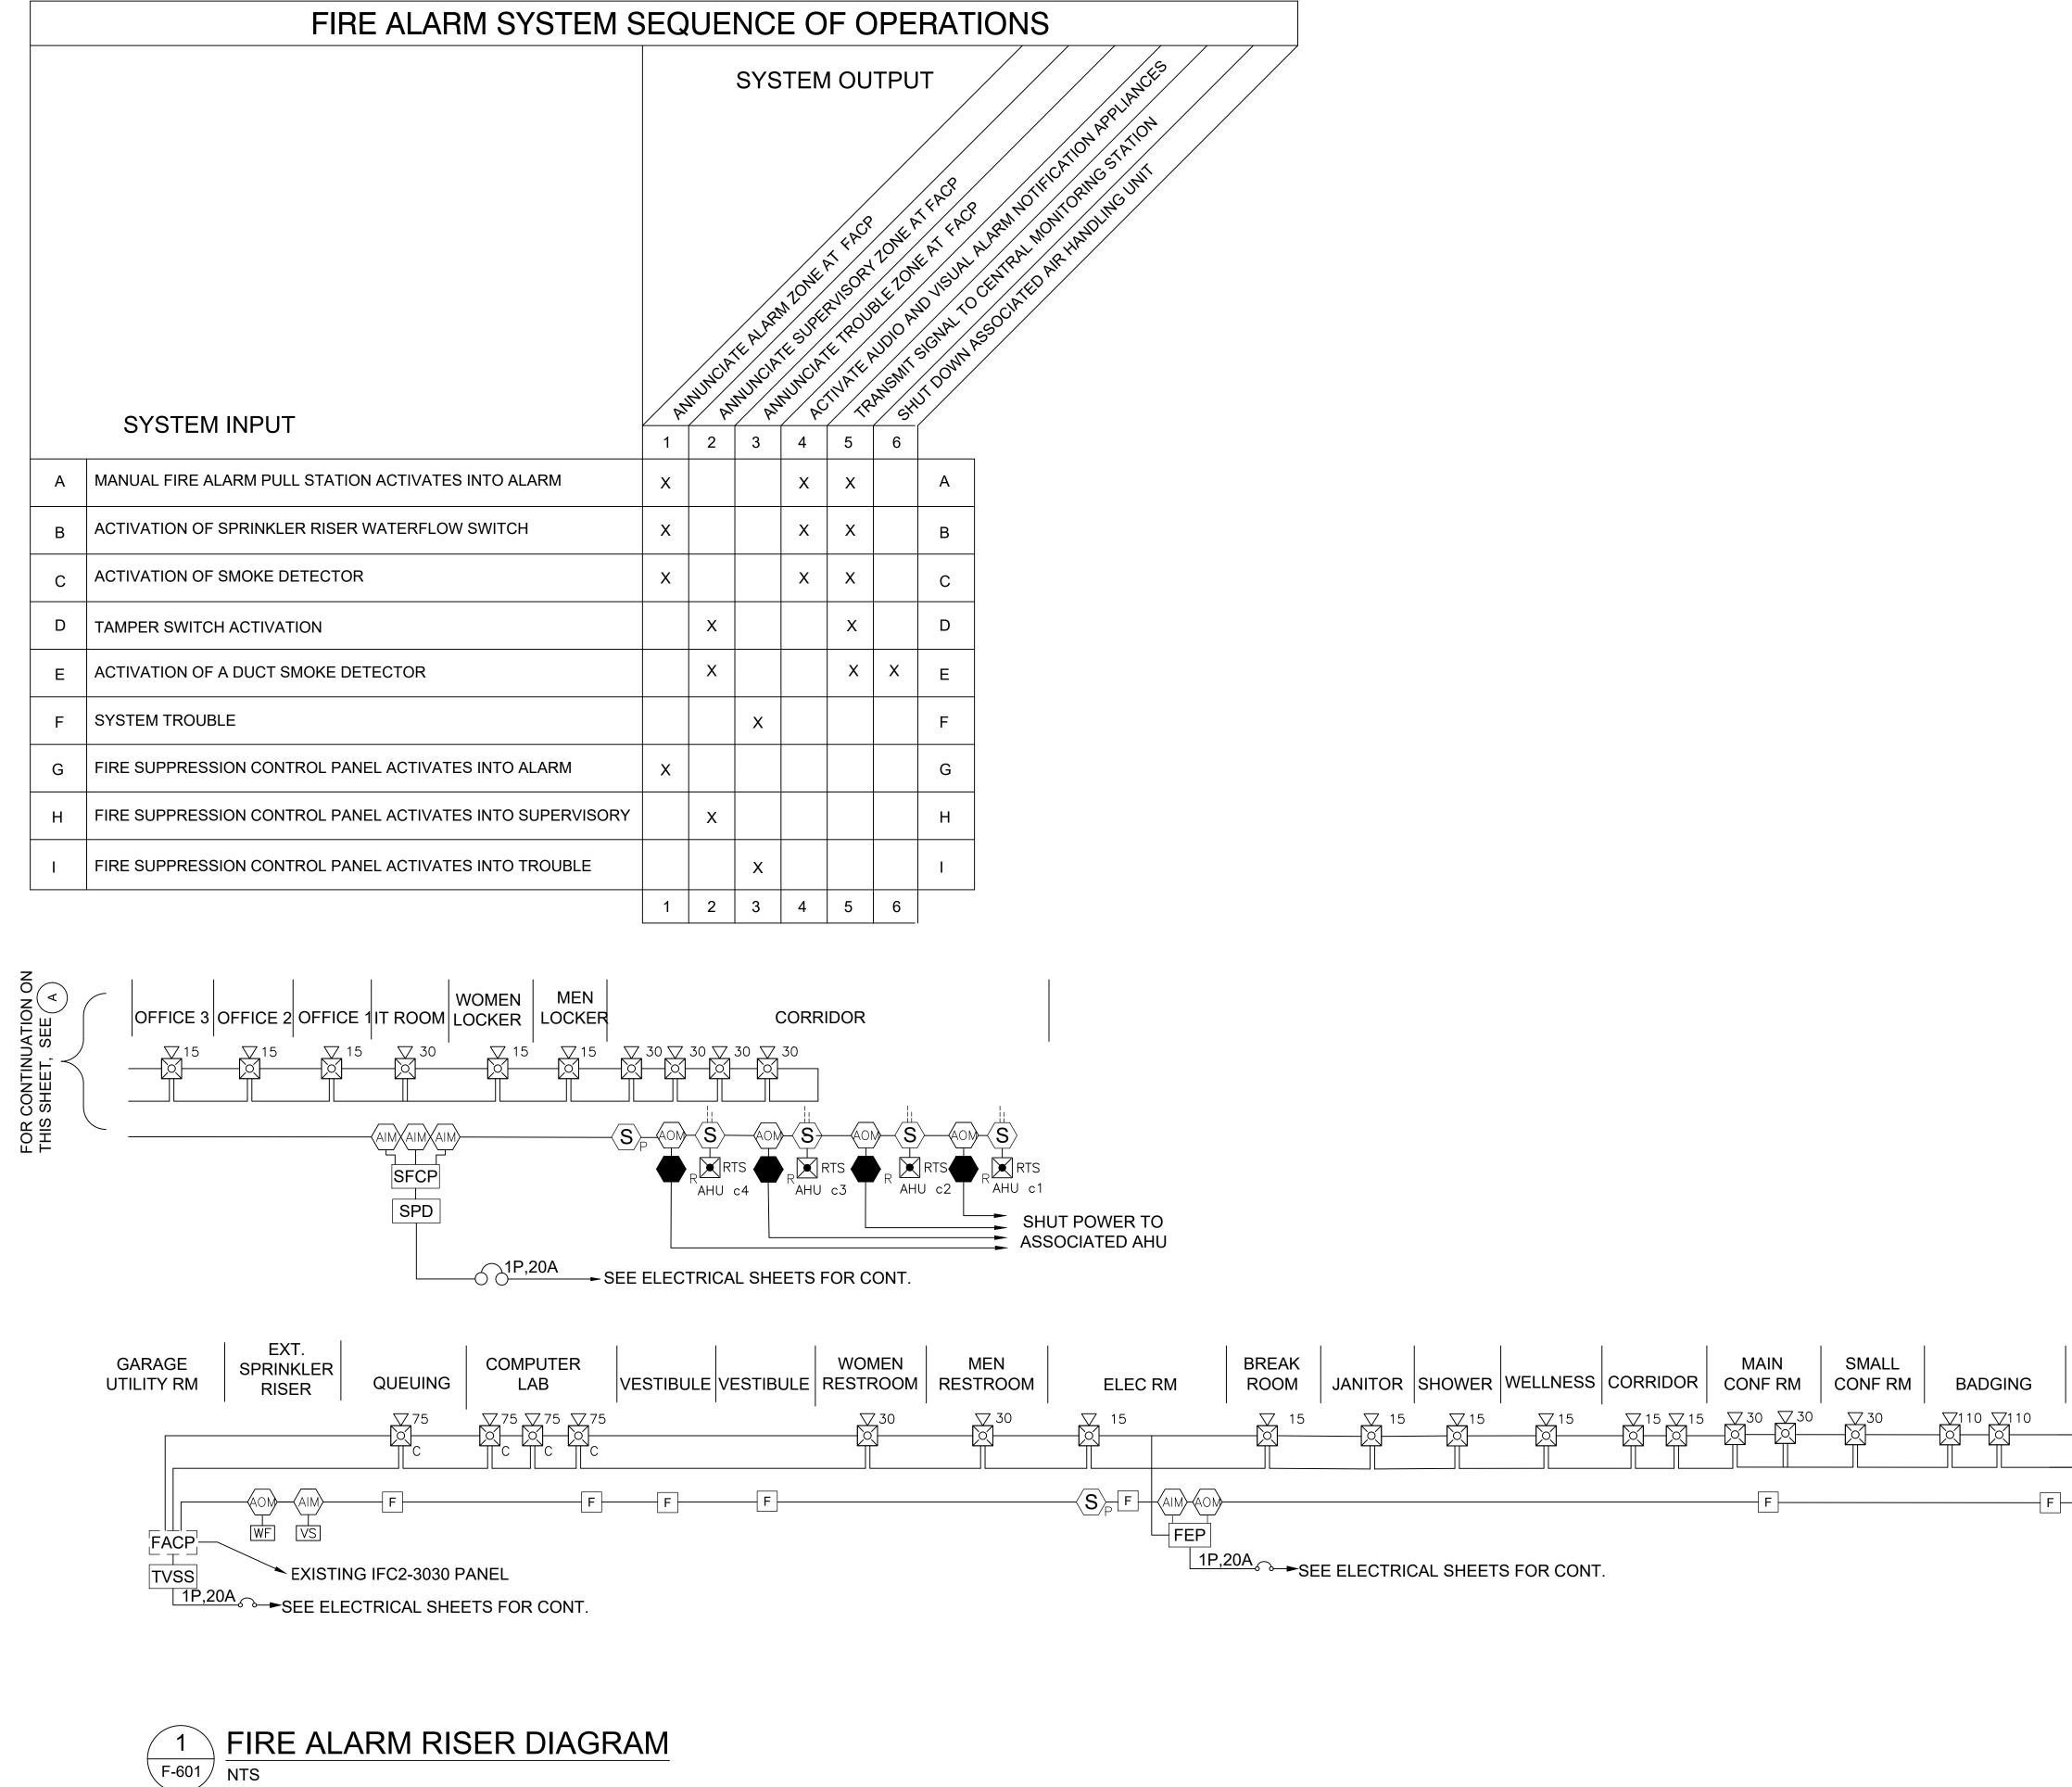

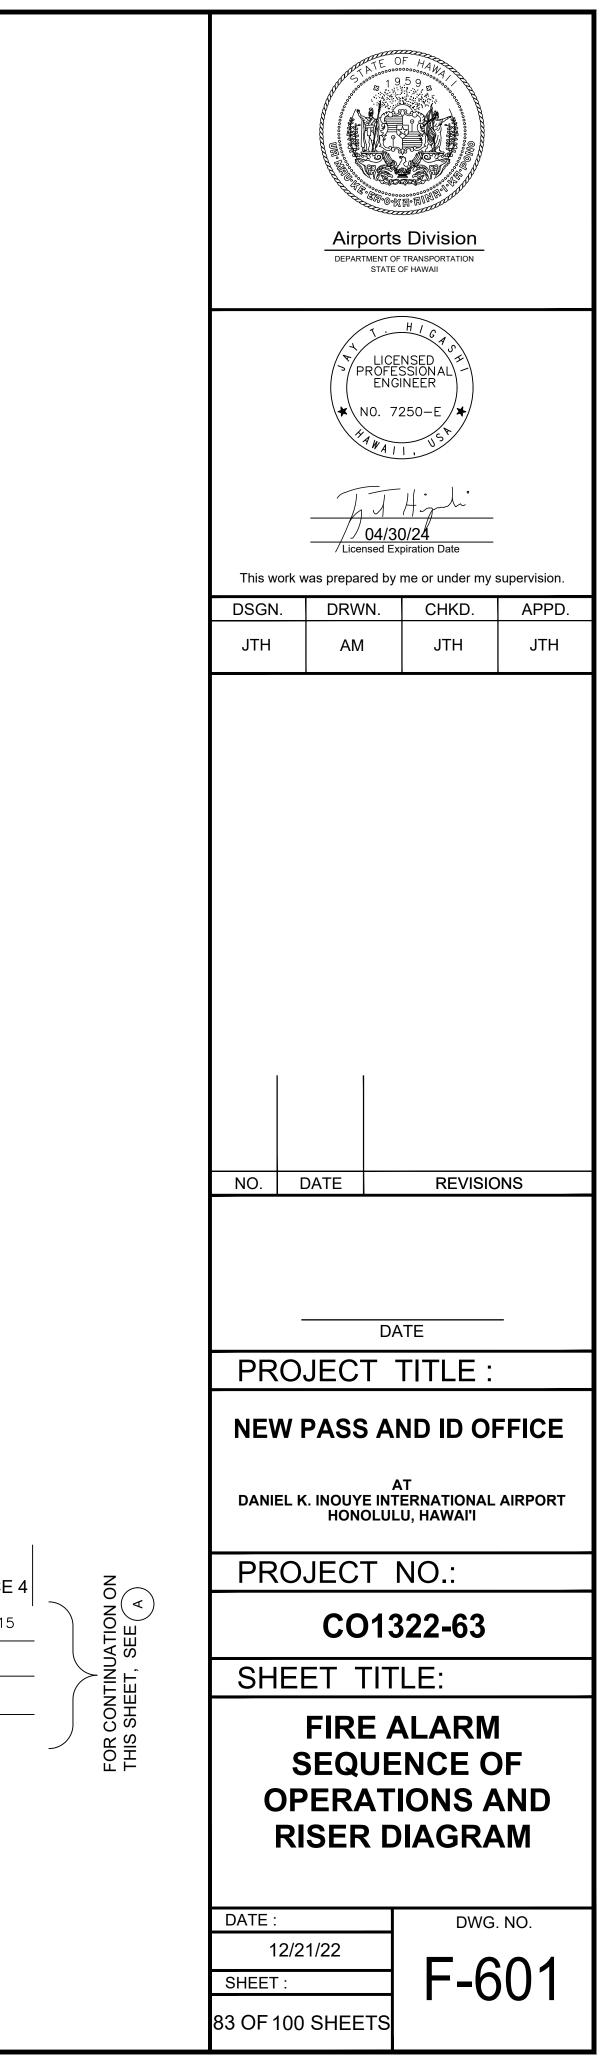

SUPPLY
RMOFFICE 5OFFICE 4 √15 Ø