

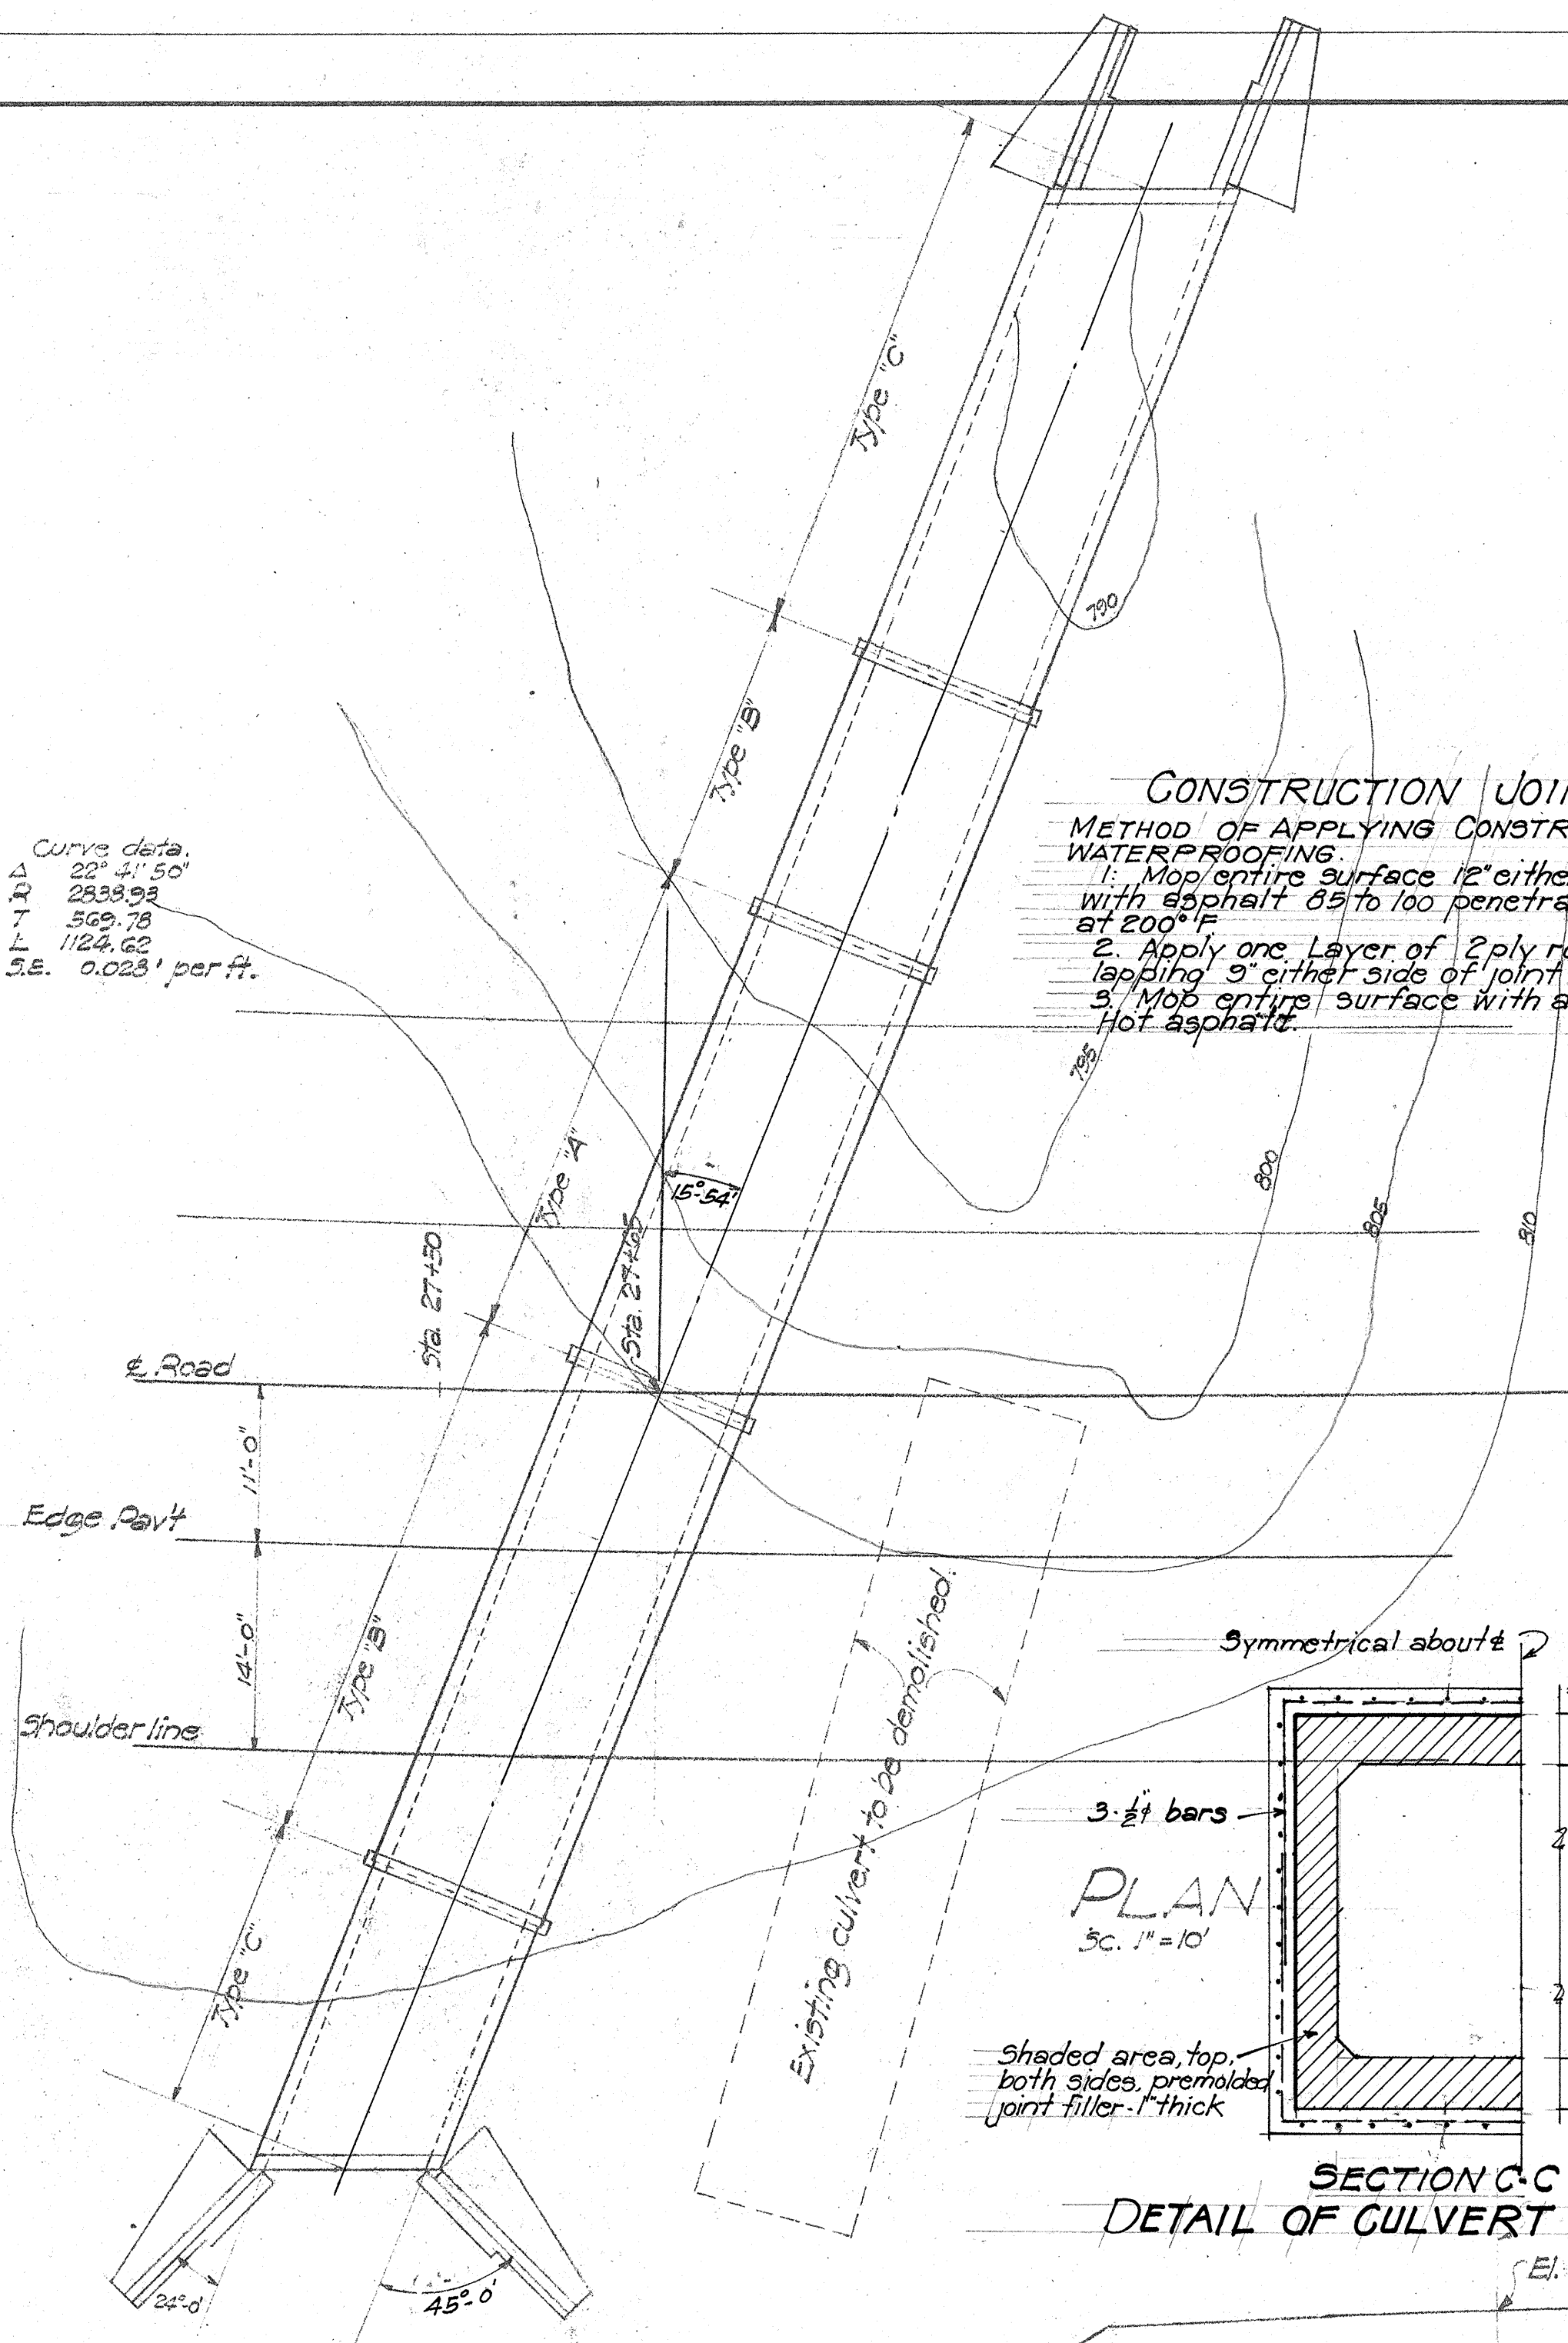
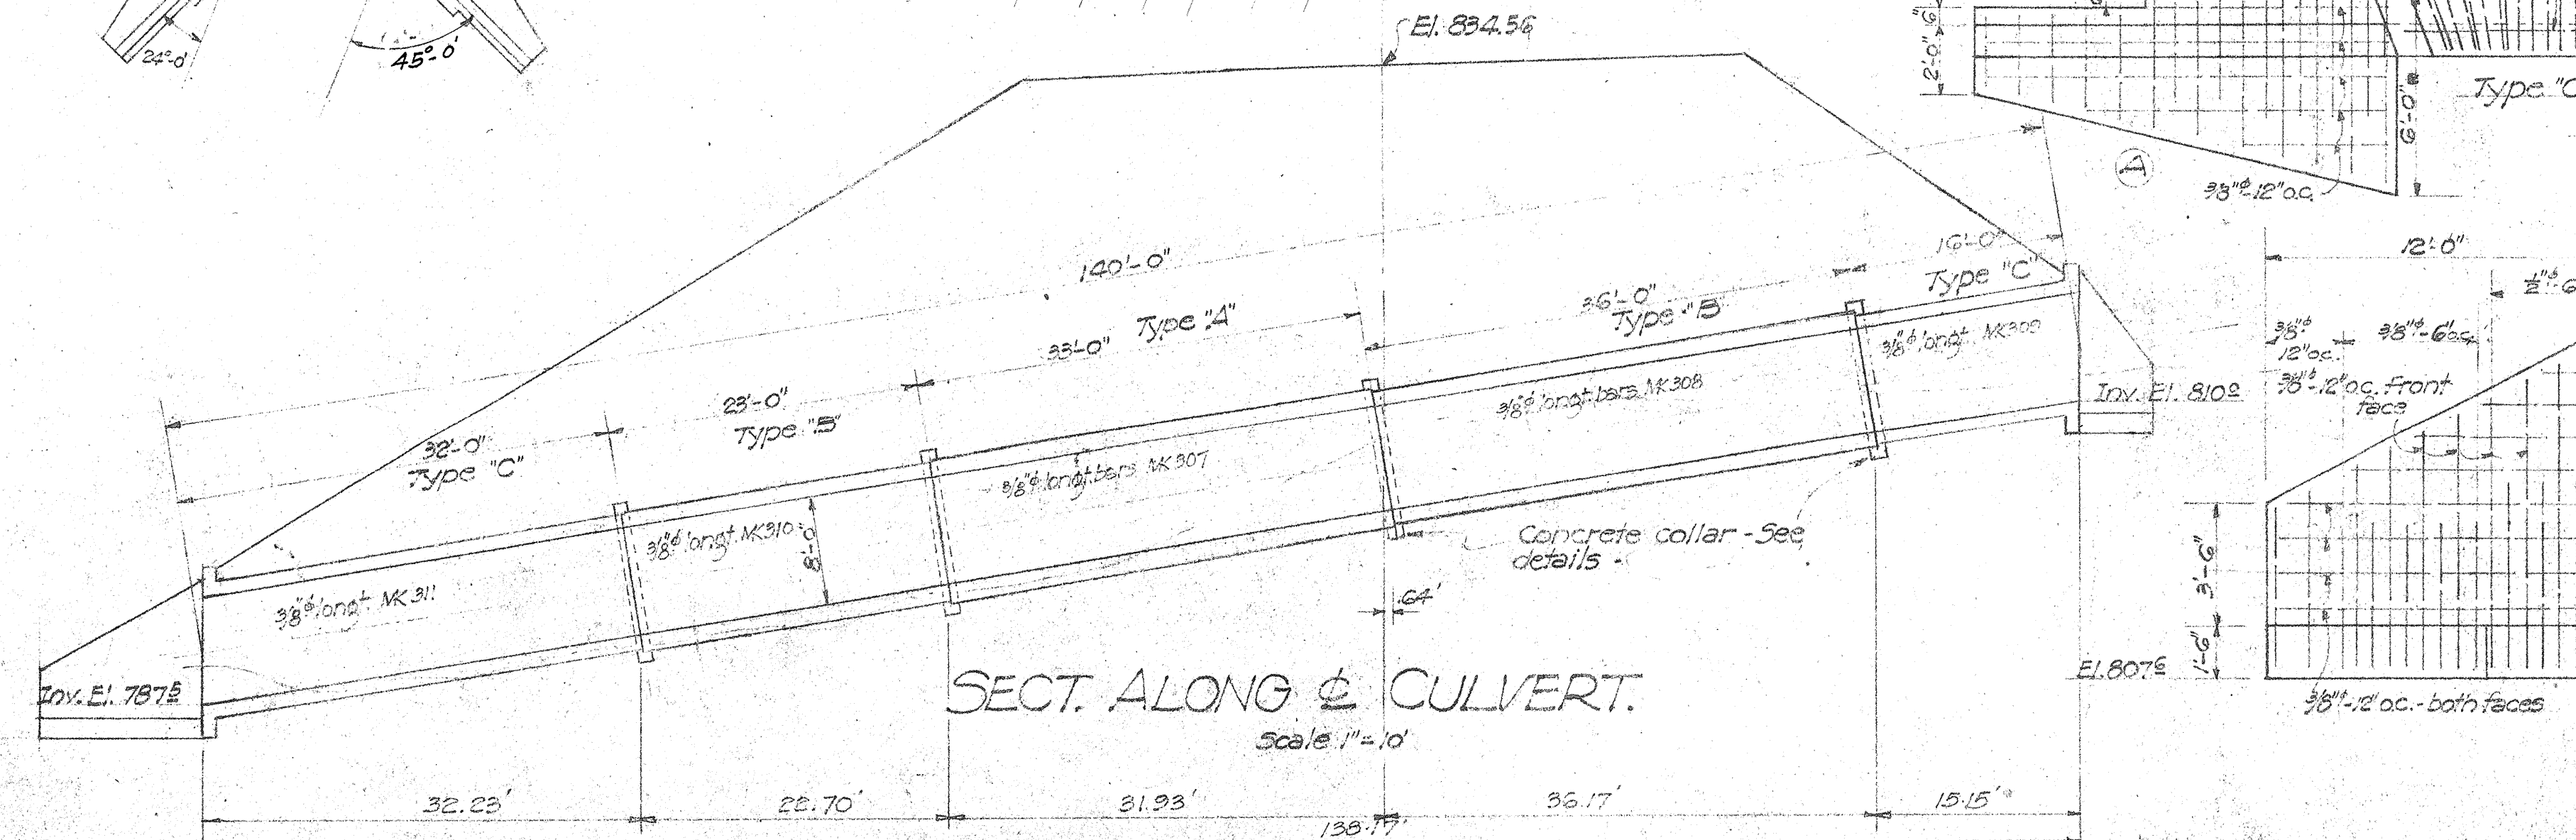
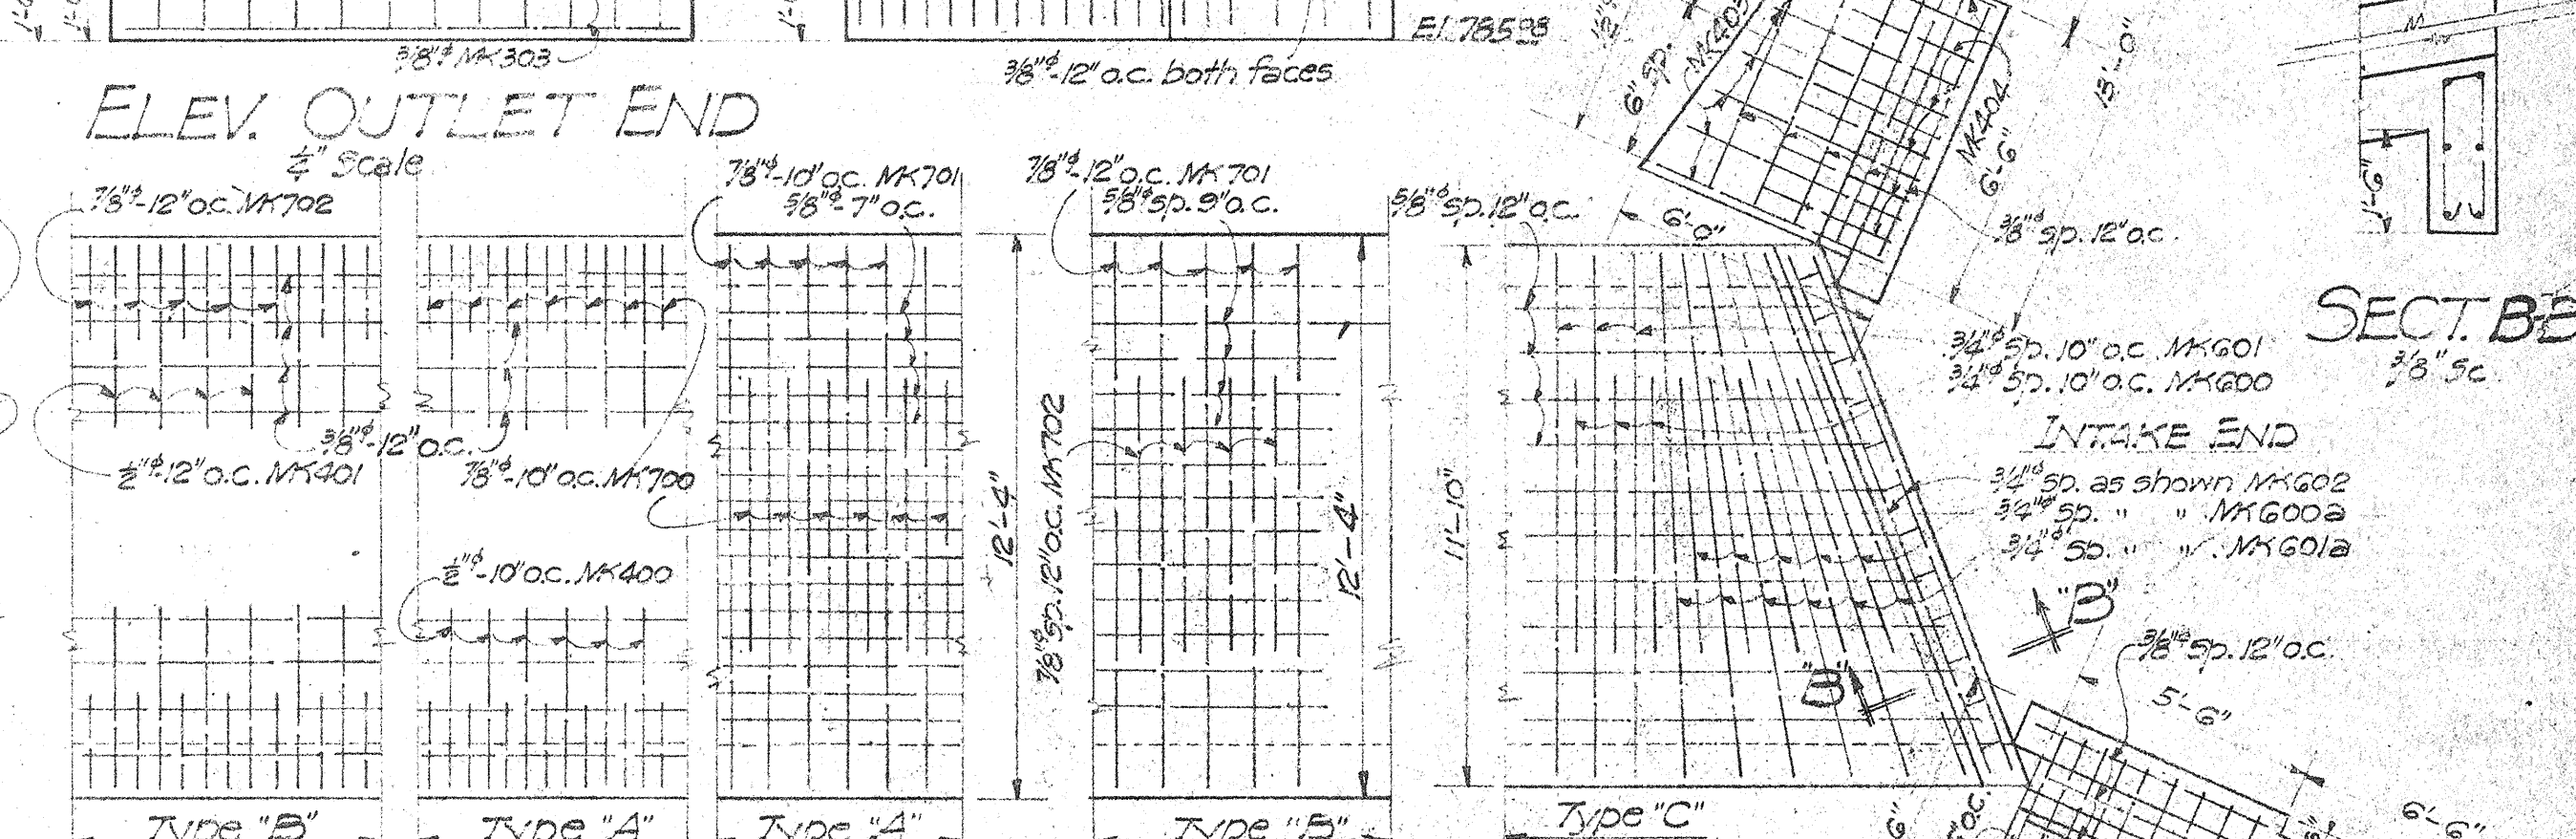
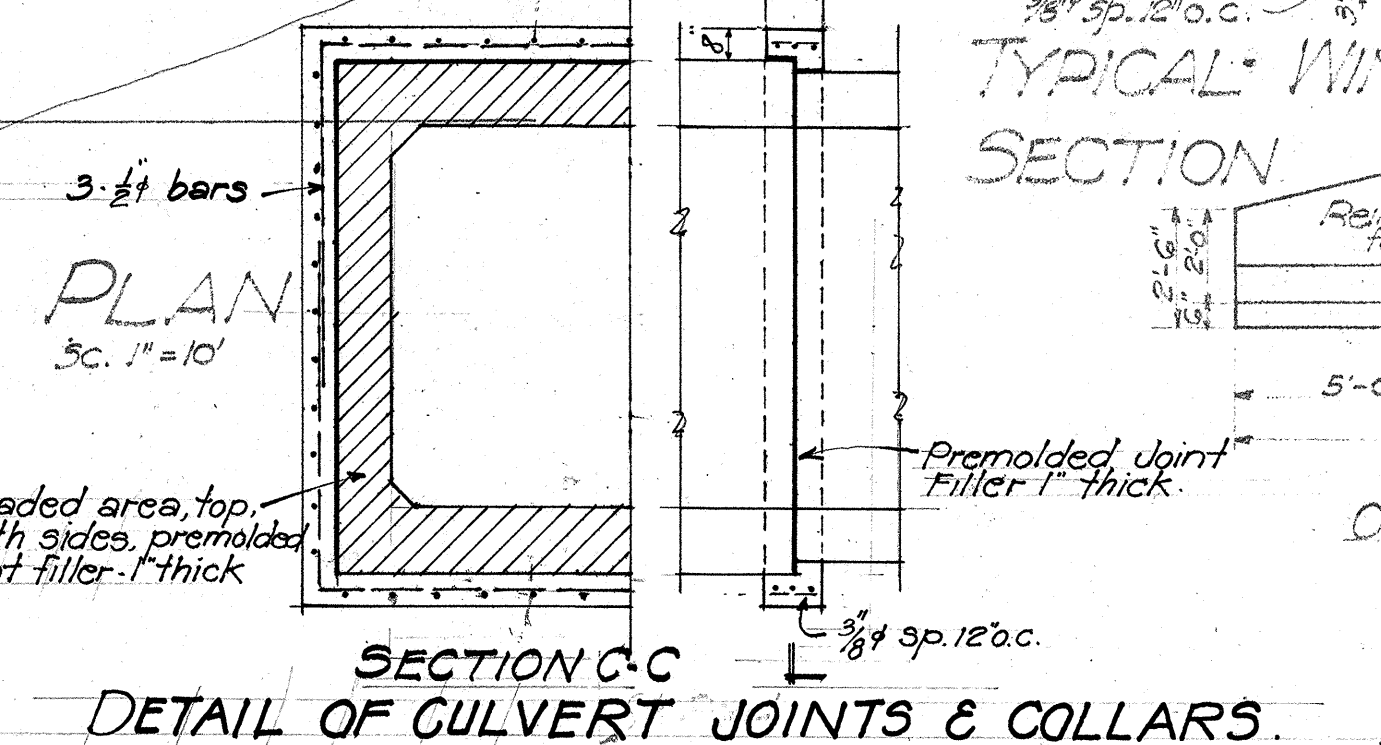
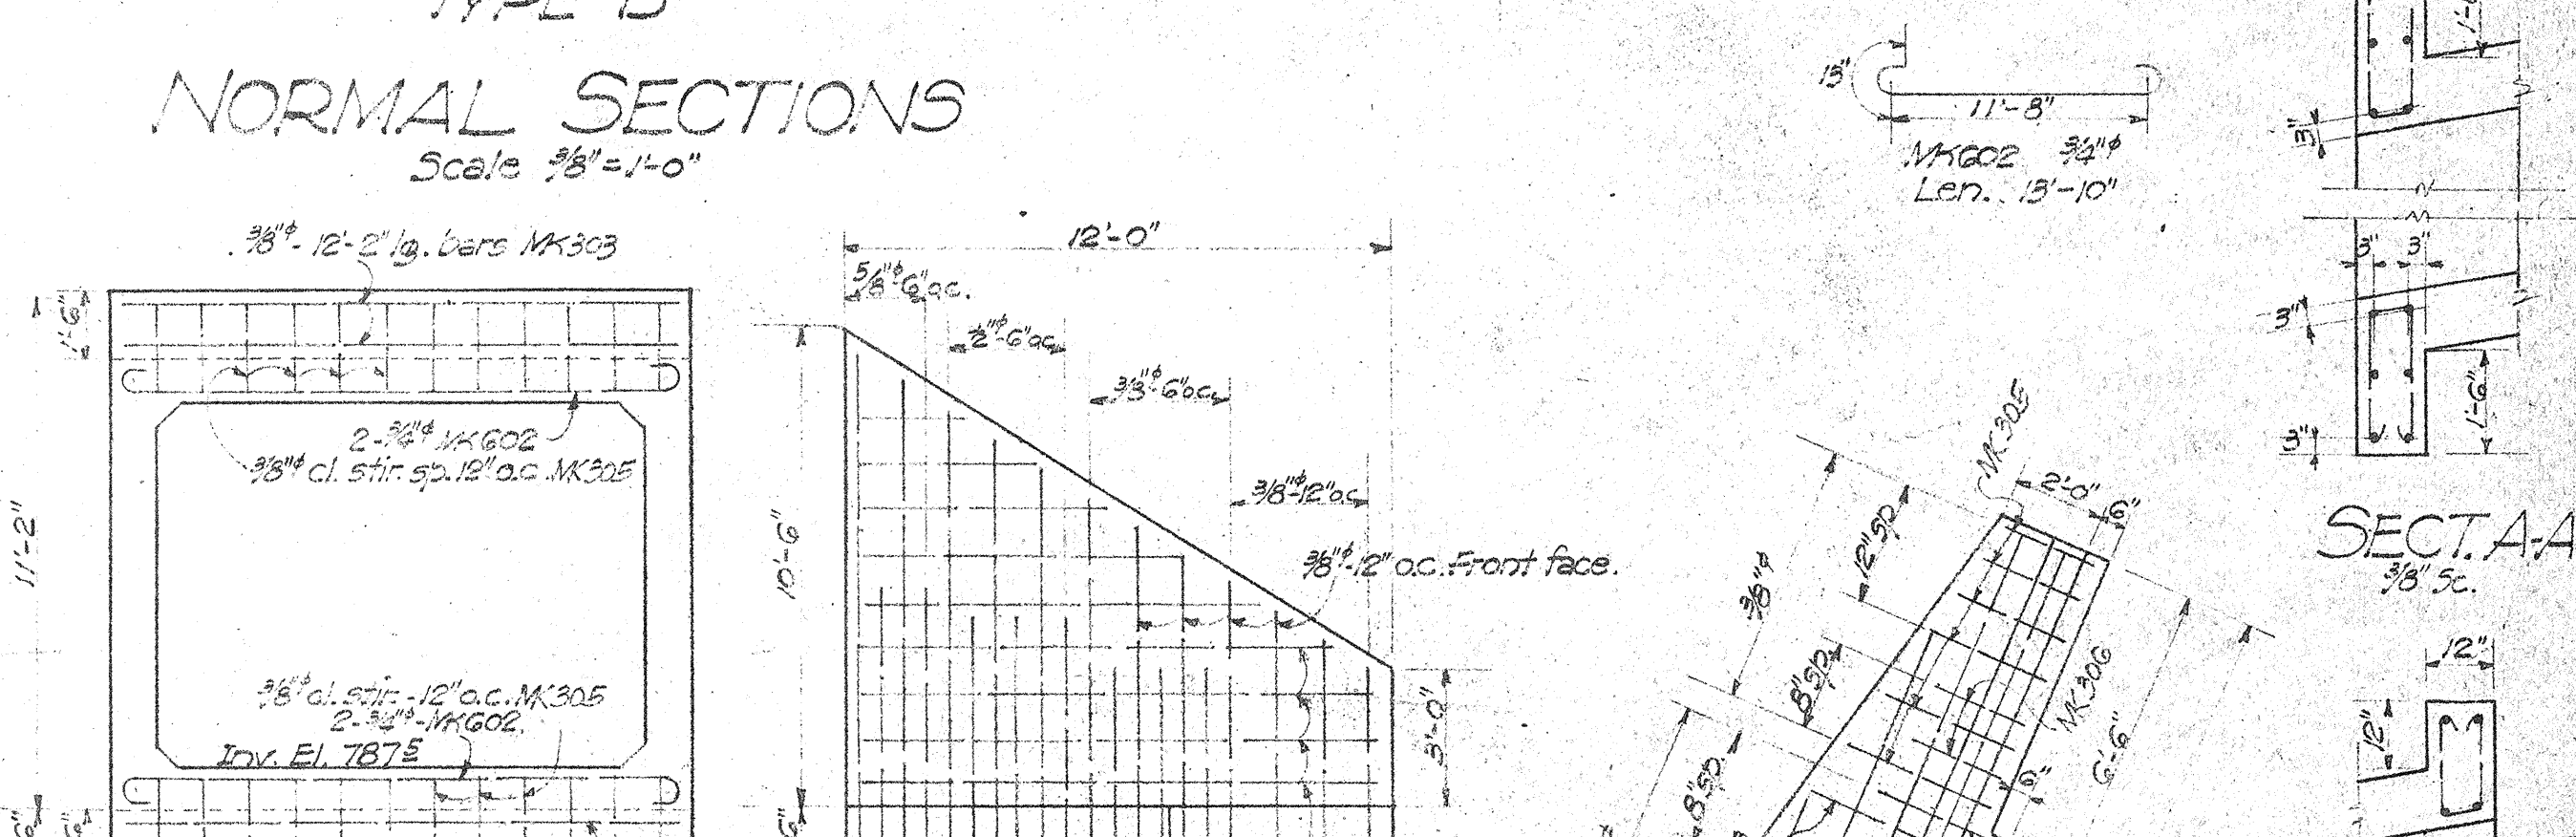


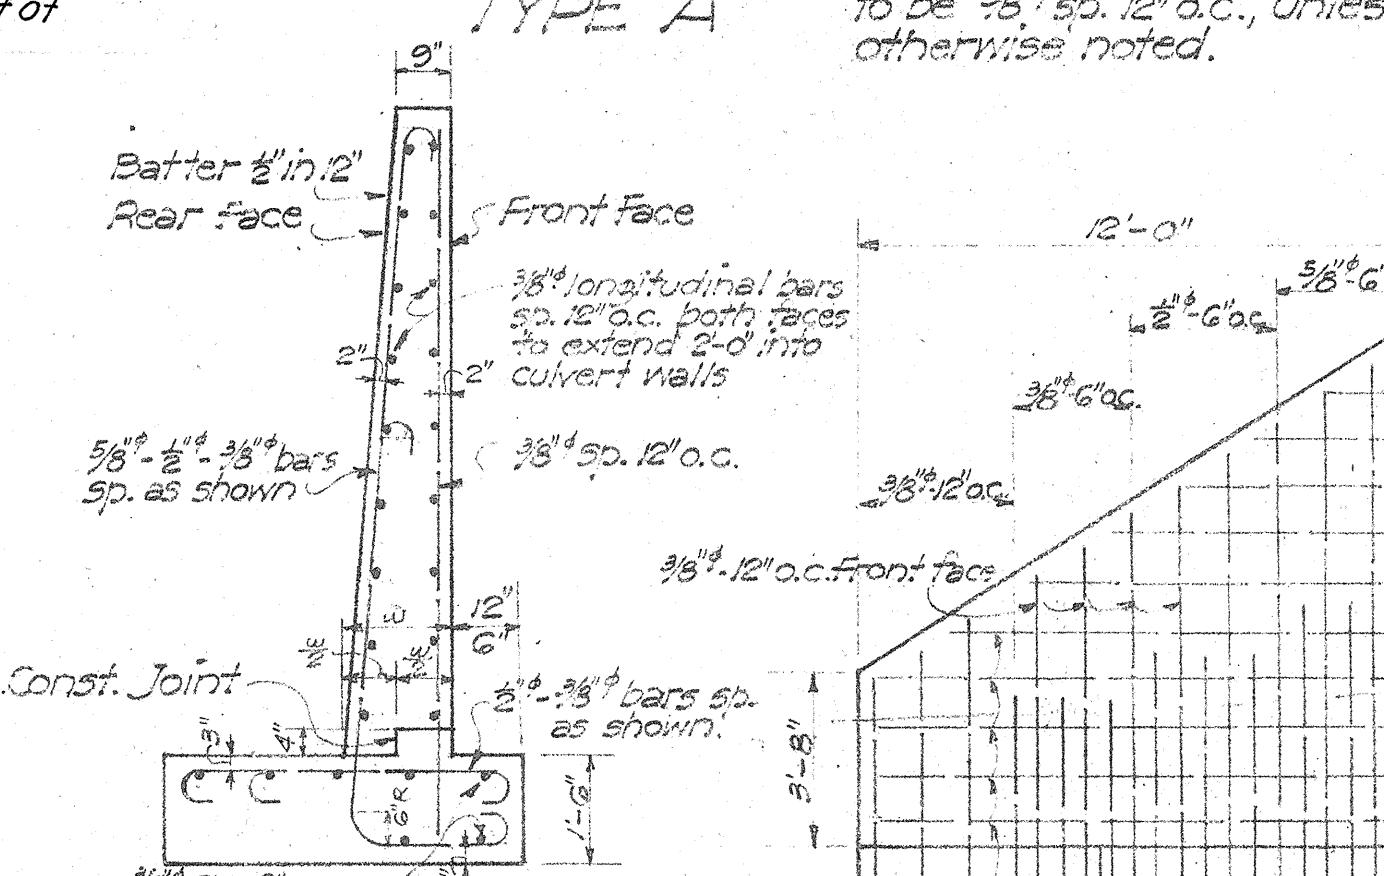

CONSTRUCTION JOINT DETAIL
 METHOD OF APPLYING CONSTRUCTION JOINT WATERPROOFING.
 1. Mop entire surface 12" either side of joint with asphalt 90 to 100 penetration applied at 200° F.
 2. Apply one layer of 2 ply roofing paper, lapping 9" either side of joint to hot asphalt.
 3. Mop entire surface with a thick coat of hot asphalt.

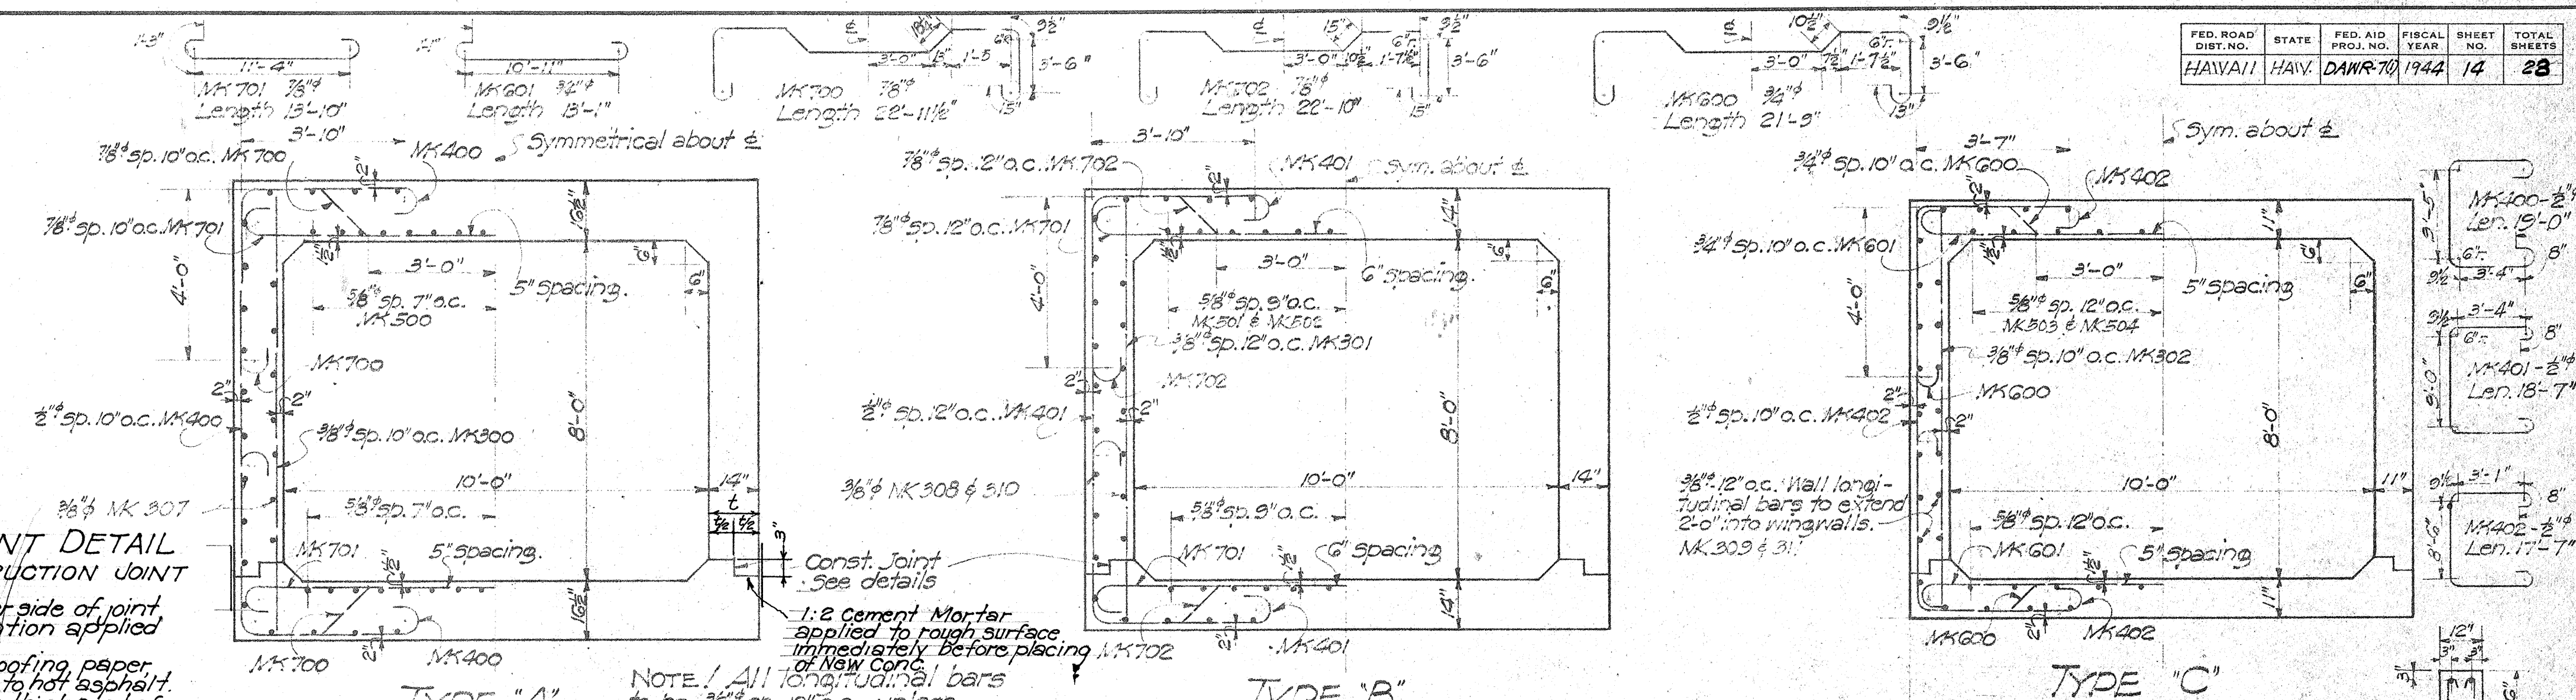

QUANTITIES
 Concrete "Cl. A" 2668 C.Y.
 Reinf. Steel 33250 Lbs.
 Struct. Excavation 250 C.Y.

TERRITORIAL HIGHWAY DEPARTMENT
 TERRITORY OF HAWAII
10'x8' CONC. CULVERT
 STA. 27+65
 WAHIAWA-SCHOPIELD CUTOFF DAWR-70(1)
 MAY, 1944
 SHEET No 7 OF 1 SHEETS

ORIGINAL PLAN
 DESIGNED BY
 DRAWN BY
 CHECKED BY
 DATE
 1/24/44